

ANT ESPORTS GP110R WIRED GAMEPAD

WARRANTY

Ant Esports GP110R Wired Gamepad Comes With 1 Year International Warranty.

Warranty Card

Customer Name : _____

Product Name : _____ Model No.: _____

Address: _____ Date of Purchase: _____

Dealer Name : _____ Phone No.: _____

CONNECT WITH US ON

ANT ESPORTS

www.antesports.com
support@antesports.com

*Notice: Any alteration of the clauses and contents and copies are invalid.



 
ANT ESPORTS GP110R WIRED GAMEPAD

Multifunction Game Controller

For PC X-Input & D-Input / Ps3 / Android / N-Switch


USER MANUAL & WARRANTY CARD

Key Instruction

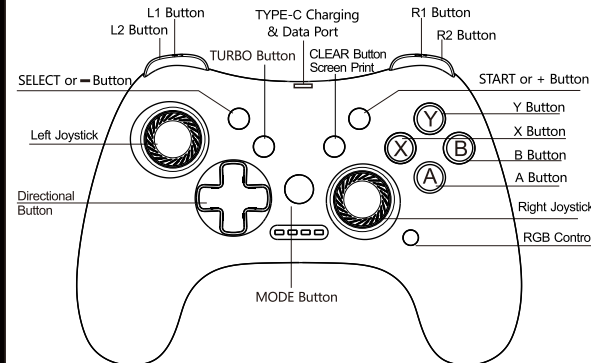

X-Input Mode

 Connect For Windows 7/8/10 System

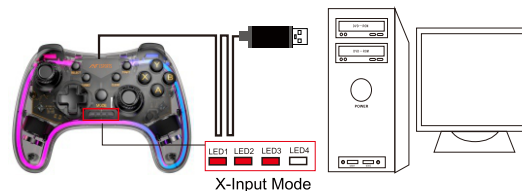


Connect gamepad to PC computer, after the system recognize the game controller, then you can use the game controller to play games.

D-Input Mode


Press the MODE button long with 3-5S, the mode will switch to D-Input mode with vibration, and the LED will turn to LED1+LED4 light.

 Android Controller Mode

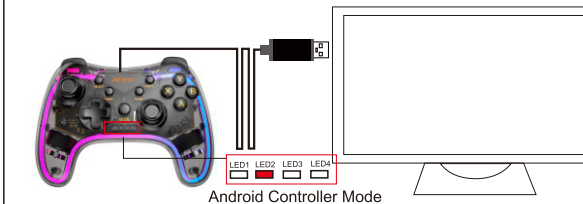

Connect gamepad to USB port of android media box, android tv set, after the system recognize the game controller, then you can use the controller to play the games.

 
Ps3 Controller Mode

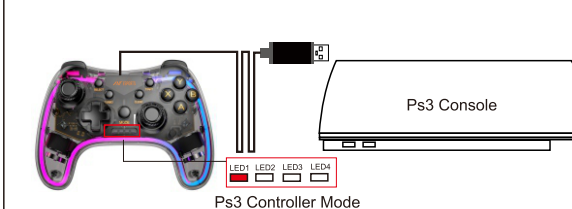



Connect gamepad with [press SELECT button together] to USB port of ps3 gaming console, after the system recognize the game controller, then you can use the controller to play the games.

Switch Gamepad Mode

 Connect For Nintendo Switch Console

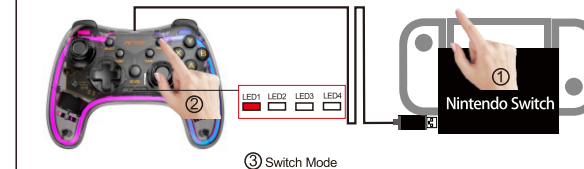

  1. Press the POWER to wake-up the gaming console;
2. Connect game controller with [press START Button] together to USB port on N-S gaming console charging dock, the LED1,2,3,4 flashes together waiting for pairing;
3. After N-S console recognized the controller and connect well, the LED1 Will be long light;
4. If the LED light is still off after go through all the above steps, try to open [Pro Controller Wired Communication] in [Setting Panel].

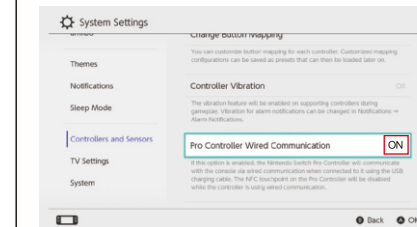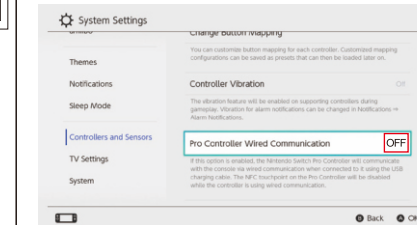

Turbo Function & Speed Adjustment

- Buttons can be set to the turbo speed (which is called to short function buttons): A/B/X/Y/L/Z/L/R/Z/R button
- Enable / Disable the turbo function:**
Step 1: Press the Turbo button and one the function button simultaneously, to enable the Turbo speed function.
Step 2: Press the button which set the TURBO function with CLEAR button to cancel the TURBO function

- Adjust Turbo speed :**
Press the Turbo button simultaneously the directional button Up / Right / Down.
Directional button UP is the mostly fast speed.
Directional button Right is the middle speed.
Directional button Down is the slowly speed.

Specifications

Product Name: Multifunction Gamepad
Model Number: GP-110R
Product Size: 152x115x58mm
Product Weight: 220g
Power Supply: Cable Connection to Console

In The Box

Gamepad, Manual, Charging Cable