

ANT ESPORTS

GP325

WIRELESS GAMEPAD

User Manual & Warranty Card

ANT ESPORTS

GP325

WIRELESS GAMEPAD

Wireless Controller

For Android / IOS 13.0+ / PC / N-S / PS3 / PS4

ANT ESPORTS

GP325

WIRELESS GAMEPAD

Warranty

Ant Esports GP325 Wireless Gamepad Comes With 1 Year International Warranty.

Warranty Card

Customer Name : \_\_\_\_\_

Product Name : \_\_\_\_\_Model No. : \_\_\_\_\_

Address : \_\_\_\_\_Date of Purchase : \_\_\_\_\_

Dealer Name : \_\_\_\_\_Phone No. : \_\_\_\_\_

CONNECT WITH US ON

ANT ESPORTS

www.antesports.com

support@antesports.com

\*Notice: Any alteration of the clauses and contents and copies are invalid.

\*All product names, logos, and brands are property of their respective owners.

All company, product and service names used here are for identification purposes only.

Use of these names, logos, and brands does not imply endorsement.

● Key Function Instruction

L1 Button

L2 Button

SELECT Button

Left Joystick

Directional Button

M1 Button

TYPE-C Charging & Data Port

MACRO Button

HOME Button

HOME Button

M1 Button

R1 Button

R2 Button

START Button

Y Button

X Button

B Button

A Button

Right Joystick

M1 Button

Mobile clip

● Android V3 Mode (Key Mapping Mode)

Step 1: Press [X+HOME] button to power on the gamepad, [LED1] will be twinkling and wait for pairing.

Step 2: Open the interface of Settings on android device, open Bluetooth.

Step 3: Scan the devices and get the name of [STK-8039FRG] , click the device into Pairing and Connect automatically.

Step 4:[LED1]indicator will be long on after connected successfully.

Android App ON

Google play

ShootingPlus V3

● Switch Key Set

In V3 mode, after the gamepad is connected to the phone, the default button layout is "No. 1". The button layout can be modified according to the virtual button of the game. According to the different game, there are four groups of key layout can be set, and the keys can be switched while playing different games.

Press [X]+HOME to switch to the [No. 2] button layout, [LED1,LED2] lights on.

Press [Y]+HOME to switch to the [No. 3] button layout, [LED1,LED2,LED3] lights on.

Press [B]+HOME to switch to the [No. 4] button layout, [LED1,LED2,LED3, and LED4] are on.

Press [A]+HOME to switch to the [No. 1] button layout, [LED1] light long on.

For Example:

No. of Key Layout	Game Name	Switch Method	LED Indication
No. 2	PUBG	[X]+HOME	[LED1,LED2]
No. 3	LOL Mobile	[Y]+HOME	[LED1,LED2,LED3]
No. 4	Call of Duty	[B]+HOME	[LED1,LED2,LED3, and LED4]
No. 1	Mobile legend	[A]+HOME	[LED1]

● Edit Key Layout

There is built-in memo chip in the game controller to allow save the key layout setting data for 4 different mobile games, the 4 key layout can be switched freely between each games.

Before play the game, you should check and revise the key layout according to different mobile. After you save the changes, you can start the games.

Please follow the steps to edit or revise key layout:

1.Log in Google Play Store to download the app "ShootingPlus " and install it to you android mobile/tablet pc.

Android App ON

Google play

ShootingPlus V3

5.Move the buttons to the position of the correspondence virtual buttons as your style.

6.Tap " Save " the settings and tap " Close " it to enjoy your games.

Reset the default setting data: Open the app-Tap the icon [Reset] on the right corner → Reset → OK

Note:

\* After resetting the data, please cancel the connection and reconnect.

\* In the game, press the SELECT key of the gamepad to view mapping data, and press the START key of the gamepad to call out key mapping data.

\* The modified mapping data is saved under the current key layout No. If the current data is HOME+Right, Then save on the current.

● Android Game Controller Mode

Step 1: Press [X+HOME] button to power on the gamepad, [LED2,4] will be twinkling and wait for pairing.

Step 2: Open the interface of Settings on android device, open Bluetooth.

Step 3: Scan the devices and get the name of [GP 325] , click the device into Pairing and Connect automatically.

Step 4:[LED2+LED4]indicator will be long on after connected successfully.

Reconnecting:

Press HOME button shortly to power on the gamepad, it will connect automatically.

Note:

1. The Android Game Controller mode allow player to play the android games from google play market, which the games can support game controller ;

● Xbox Wireless Controller Mode for PC, Android & IOS13.0 above

Step 1: Press [R1+HOME] button to power on the gamepad, [LED1,2,3] will be twinkling and wait for pairing.

Step 2: Open the interface of Settings on android / IOS device, open Bluetooth.

Step 3: Scan the devices and get the name of [Xbox Wireless Controller] , click the device into Pairing and Connect automatically.

Step 4:[LED1,2,3]indicator will be long on after connected successfully.

Reconnecting:

Long press HOME button to power on the gamepad, it will connect automatically.

● MFI Controller Mode For IOS13.0+

Step 1: Press [B+HOME] button to power on the gamepad, [LED4] will be twinkling and wait for pairing.

Step 2: Open the interface of Settings on android device, open Bluetooth.

Step 3: Scan the devices and get the name of [DUALSHOCK4 Wireless Controller] , click the device into Pairing and Connect automatically.

Step 4:[LED4]indicator will be long on after connected successfully.

Reconnecting:

Press HOME button shortly to power on the gamepad, it will connect automatically.

Note:

Recommend the APP that collect the gamepad games already, you can need to download the app and installed.

ShanWan MFI

ShanWan MFI App is an App suitable for MFI protocol controllers, including Xbox, PS4, PS5, and MFI controllers. You can download related games that support...

View more >

Game Controller Apps

All iOS games which are compatible with game controllers. If you have a MFI game controller, you can use this free App to see all games which work with...

View more >

ANT ESPORTS

GP325

WIRELESS GAMEPAD

OUR PRODUCT LINE-UP

PC Case | Gaming Chair | Mousepad | Mouse | Keyboard & Mouse Combo | Gamepad | Sound Card | Webcam

Wireless Earphone | Headset | Headset Stand | Gaming Glasses | PSU MOD Cables | Storage | Memory | PC Docking Stations

Speaker | Case Fans | CPU Cooler | LED Strip | Microphone | Power Supply | HDMI Cable

● N-S Controller Mode

(Power on your N-S Console, then follow the steps to pair and connect your controller.)

Step 1:Find [Controllers] Option-Image1

Image 1

Step 2:Click [Change Grip/Order] -Image2

Image 2

Step 3:Press [L1+HOME] button power on gamepad,4 LED lights blink in turn,waiting for the connection to complete.-Image3

Image 3

5-7s later, the controller will connect to console automatically.

Reconnect: Press HOME Button

If your controller was once paired and connected to your N-S console, press the HOME button to rapidly connected next time.

When one of the following conditions occur, please reconnect referring to first time to pair and connect.

1.Upgrade

2.Reset

3.Change the console.

\* Please make sure turn off the Airplane Mode when you connect controller to switch console

● PS3/PS4 Controller Mode

Step 1: Connect the Controller to PS3 / PS4 console with TYPE-C cable.

[The LED1, LED2, LED3] will long on after console recognized.

Step 2: Press the [HOME] button to start pairing to console, [LED turn to LED4] flashes;

Step 3: Few seconds later, [LED4]turns to long on. The controller connected to PS3 / PS4 console;

Step 4: Plug off the cable, it will wireless connection.

Reconnecting:

Press HOME button shortly to power on the gamepad, it will connect automatically.

● Update

If there is problem for the connection while the console update, we can offer the update method as follows:

You can download the "ShootingPlus V3" app from the google play or apple store, then install to your cellphone; follow the step to update your controller.

1.Connect android phone with ShootingPlus V3 Mode(A+HOME to power on);

2.Open the ShootingPlus V3 app, then follow the instruction to finish the update;

● PC Wired Controller Mode

X-Input Mode

Connect controller to pc with type-c cable, after windows system recognized, the controller will start to work, LED 1,2,3 light will be long on.

D-Input Mode

Under the mode of X-Input, press the HOME button long to switch X-Input to D-Input Mode.

● Turbo / Auto Function

Buttons (which called short function buttons) can be set TURBO : A/ B/ X/ Y/ L/ ZL/ R/ ZR button

Enable/ Disable the TURBO speed function:

Step 1: Press the Turbo button and one the function button simultaneously , to enable the Turbo speed function.

Step 2: Repeat the Step1 to disable TURBO function.

Adjust TURBO speed :

Press the TURBO button simultaneously the directional button Up / Down,

Press TURBO+Direction UP button to adjust the TURBO to faster.

Press TURBO+Direction DOWN button to adjust the TURBO to slower.

● Specification

Product name: Multifunctional gamepad

Model number: GP325

Product size: 152x115x58mm

Product weight: 220g

Power supply: built-in 400mAh polymer battery

Charging interface: Type-c

Game time: 5-10h

Charging time: 2-2.5H

● Reset

You must reset the controller while the situation of crash after charging or while playing games.

Use the Pin to click the RESET hole to rest the controller.

RESET

● Macro Function

Programmable Buttons: A/B/X/Y/L1/L2/R1/R2/up/down/left/right buttons

1.Enter the MACRO Mode

1st. Under connection status, press MACRO Button+M1 or M2 (on the backside of controller) that needs to be programmed, to enter the programming mode, the LED will flashes slowly to indicate the programming status;

2nd. Press the function keys that need to be set in turn, the programming button will record the time interval of each button (for example: press Macro+ M1 to turn on the programming mode, then press the B button, wait 1 second to press the A button , then wait 3 seconds to press the X button, lastly press the M1 key to save and exit after the setting is completed, at this time the functions M1 key is B, 1 second later is A, 3 seconds later is X), each programmable button can be set up to 16 buttons. It can be tested whether the setting is successful on the Console interface "Settings→ Controller and Sensor→Check Input Device→Check Keys".

2.Clear MACRO function:

Under connection status, press MACRO Button + M1 or M2 (on the backside of controller)that need to be cleared, the LED will flashes slowly, press the Back button again to clear the record;

3.Clear all MACRO function:

Under connection status, press MACRO Button long to wait the LED1,2,3,4 flashes slowly, then clear all the programming record;

● FAQ:

Problem 1:The LED4 do not flashes while the controller plug to Switch console basement.

Solve Method:The controller support wired switch controller function,If the pro controller wired communication function turn on ,while connect to N-S basement, the controller will turn to wired controller function after connected.The LED4 will not flashes! You need to turn off the pro controller wired communication, the LED4 will turn to normal.

Panel to Close the Pro Controller Wired Communication

Pro Controller Wired Communication

ON

Pro Controller Wired Communication

OFF

Problem 2:The Joystick stuck after long playing.

Solve Method:Press down the joystick head strong if there is stuck problem, it will solve the problem.

Problem 3: Can not charge the controller.

Solve Method:The temperature lower than 2 degree, or higher than 45 degree, the controller will stop the charging. So, please check if the room temperature is during this scope;

● In The Box

Gamepad, Manual, Charging Cable